


## Installation Instructions for the 2" B-Vent Kit

### FLEXIBLE


#### Contents of the Kit

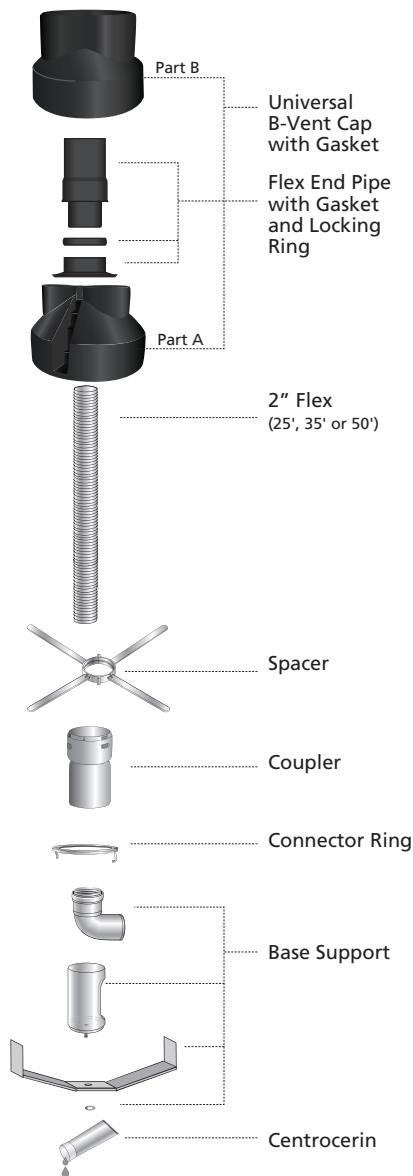


- Part B: Universal B-Vent Cap with Gasket
- Flex End Pipe with Gasket and Locking Ring
- Part A: B-Vent Cap
- 2" Flex (25', 35' or 50')
- Spacer
- Coupler
- Connector Ring
- Base Support
- Centrocerin


#### Installation Instructions


- Mount metal bracket of Base Support between floor joists and below B-Vent.

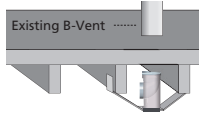

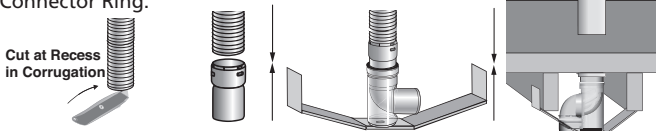- Measure B-Vent height. Cut the 2" Flex based on required length plus 2 ft. Attach spacers to 2" Flex every 6.5 ft. Pull 2" Flex through the B-Vent. At the base install Coupler, place Connector Ring on Coupler's male end, insert male to Base Support and snap on Connector Ring.

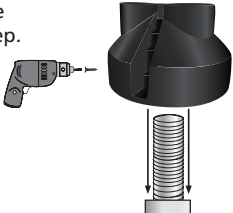


Cut at Recess in Corrugation
- Slide B-Vent Cap (Part A) over 2" Flex and use three 1/2" screws provided to fasten B-Vent Cap to B-Vent in appropriate recessed step.


- Slip the Locking Ring over the 2" Flex.



- Trim 2" Flex flush with Locking Ring.


- Connect Flex End Pipe into Locking Ring.

Push Universal B-Vent Cover (Part B) over End Pipe and fasten at triangle tips using 3 of the 1/2" screws provided.

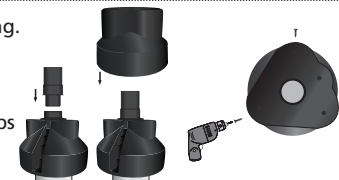
- From Base Support, make the connection to the appliance with rigid components, following **Horizontal Installation** instructions.

Refer to approved appliance matrix for appropriate appliance adaptor:  
[www.centrotherm.us.com/literature/o-e-m-approvals/](http://www.centrotherm.us.com/literature/o-e-m-approvals/)

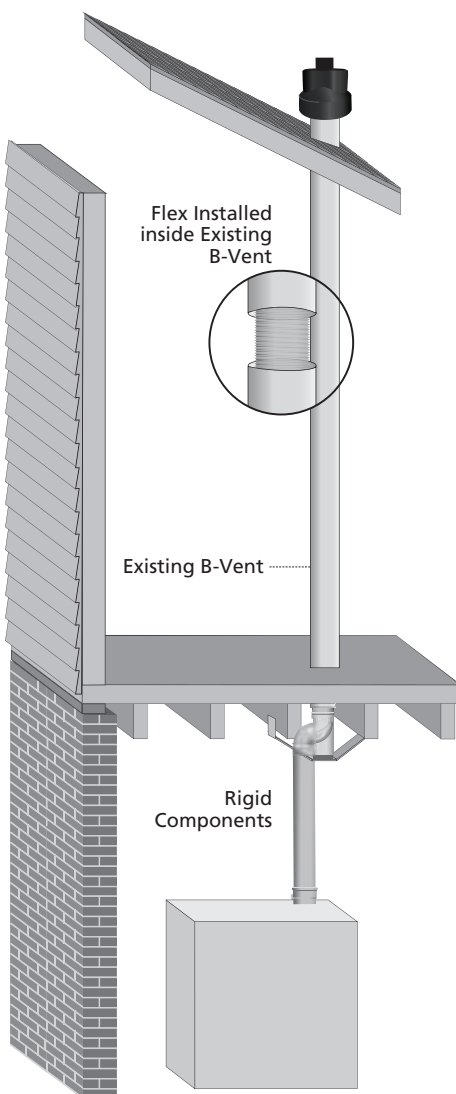

Flex Installed inside Existing B-Vent

Existing B-Vent

Rigid Components